

**Newsletter 04-2008**

Dear Customer / Business Partner,

In this newsletter please be advised about our latest product updates.

If you have any questions, please contact us. We are happy to help.

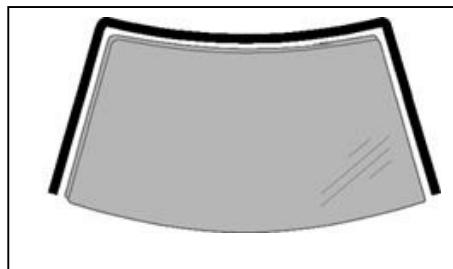
Best regards

PMA / TOOLS DIVISION

**New articles in our range:****RENAULT KANGOO III, 08-**

**Art. No. 3 92 178 13 1**  
Eurocode 7274ASMV

WS-Moulding, 1 pc.

**INFO ABOUT THE PRODUCT:****OE identical 2 component profile:**

Soft outer lip, inner profile in high shore hardness material

**FEIN KNIFE 216**

**Art. No. 06 28 10 89**

This straight 60 mm blade is ground on both sides.



For use in cutting out from inside the vehicle. Large PU beads can be cut, e.g. when removing backlites or windscreens in the A-pillar or roof area. Can also be used to cut aluminium trims.

It offers high stability and can be re-ground.

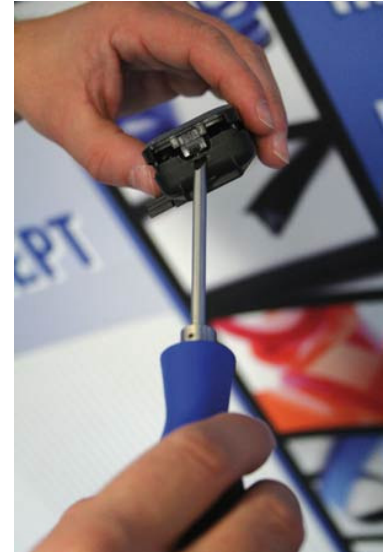
Packaging unit: 2 pieces

**LEVER BAR****Art. No. 13 36 01 229**

For levering off the electronic module of square rain/light sensors (e.g. VW/Skoda type).

Can also be used for removing caps, trims, switches, rubber or fabric trim without damage.

Rounded edges ensure vehicle paintwork and surrounding material are not damaged.

**STARTER KIT SENSORTACK 2****Art. No. 13 36 01 231**

Includes SensorTack 2 Gel (Art.No 13 36 01 220), SensorTack 2 refill mould (Art. No. 13 36 01 228) and lever bar (Art.No. 13 36 01 229) for detaching the electronic module from the optical unit.

For more information:  
<http://www.sensorinfo.eu/en/html/sensortack2.html>

**PROTECTIVE GLOVES PU COATED****Art. No. 08 19 30 63 (Size XL)**  
**Art. No. 08 19 30 64 (Size XXL)**

Colour grey – PU coated and made of seamless polyamide fabrics (fine knit).

These gloves are liquid repellent, anti-slip, lint-free and breathable.




Everything at a glance:

## Product information / 04-2008

### New items - trims and mouldings

### Highlights:

PMA-Article no. Eurocode	Model/Year	Description	OE Number	INFO
690018131 3743ASMV	<b>Ford Transit Connect</b> 01/03-	WS-Moulding OEM 1 pc.	4417444	<b>NEW/replaces</b> Art. 690018132
357028133 6307ASMV	<b>Opel Zafira II</b> 05-	WS-Moulding 1 pc.	110220 	<b>NEW/replaces</b> Art. 357028131
392178131 7274ASMV	<b>Renault Kangoo III</b> 08-	WS-Moulding 1 pc.	8200425923 	<b>NEW</b>
250328131 4433ASMH	<b>Kia Pro Cee'd 3doors</b> 08-	WS-Moulding 1 pc.	861301H200 	<b>NEW</b>
558058132 8032ASMR	<b>Suzuki Grand Vitara II</b> 05-	WS-Moulding 1 pc.	8461165J00 	<b>NEW</b>
475878131 8376ASMS	<b>Toyota Corolla 4trg. Sed.</b> 07-	WS-Self-adhesive moulding 1 pc.	8451251K00 	<b>NEW</b>
5916278131 AJ11ASMRT	<b>Jeep Commander</b> 05-	WS-Moulding upper 1 pc.	55369035AC 	<b>NEW</b>
<b>Further new items:</b>				
110518131 2456ASMRT	<b>BMW X6 (E71)</b> 08-	WS-Mouldg. upper (w/o HUD) OEM 1 pc.	51317179737	<b>NEW</b>
110518136 2456ASMRT1H	<b>BMW X6 (E71)</b> 08-	WS-Moulding upper (w. HUD) OEM 1 pc.	51317179738	<b>NEW</b>
110518141 2456AKCR	<b>BMW X6 (E71)</b> 08-	WS-Clip kit, A-pillar OEM 12 pcs.		<b>NEW</b>
171238141 2740AKCSS	<b>Citroen C5</b> 08-	WS-Clip kit, A-pillar OEM 10 pcs.	10 X 812398	<b>NEW</b>
8000108 3550/8548/7606	<b>Ford Galaxy/VW Sharan/ Seat Alhambra</b> 95-	Window regulator repair clip left 1 pc.		<b>NEW</b>
8000109 3550/8548/7606	<b>Ford Galaxy/VW Sharan/ Seat Alhambra</b> 95-	Window regulator repair clip right 1 pc.		<b>NEW</b>






223538136 3559ASMHL	<b>Ford Mondeo II</b> 01-07	WS-Cover moulding left OEM 1 pc.	1305443	<b>NEW</b>
223538137 3559ASMHR	<b>Ford Mondeo II</b> 01-07	WS-Cover moulding right OEM 1 pc.	1305444	<b>NEW</b>
223598101 3569AKGHS1F	<b>Ford Mondeo III</b> 07-	WS-Installation kit right+left OEM 2 pcs.	1518678+1519841	<b>NEW</b>
223598102 3569AKMHS1F	<b>Ford Mondeo III</b> 07-	WS-Cover mouldg.kit right+left OEM 2 pcs.	1506264+1506265	<b>NEW</b>
223598135 3569ASMHR	<b>Ford Mondeo III</b> 07-	WS-Cover moulding right OEM 1 pc.	1506264	<b>NEW</b>
223598136 3569ASMHL	<b>Ford Mondeo III</b> 07-	WS-Cover moulding left OEM 1 pc.	1506265	<b>NEW</b>
300018131 5171ASMR	<b>Mazda CX7</b> 07-	WS-Moulding OEM 1 pc.	EH1050601A	<b>NEW</b>
350228131 6318ASMH	<b>Opel Agila B</b> 08-	WS-Moulding OEM 1 pc.	4708374	<b>NEW</b>
558238131 8034ASMH	<b>Suzuki Splash</b> 08-	WS-Moulding OEM 1 pc.	8451251K00	<b>NEW</b>
5067	<b>Universal profile</b>	for bullet-proof glass Thickness 28-34mm		<b>NEW</b>

### New items - Tools/Sensors

PMA-Article no. Eurocode	Model/Year	Description	OE Number	INFO
09330574	<b>Cartridge gun</b>	Electraflow 600S Battery-powered 14.4V incl. Battery and recharger		<b>NEW</b>
06281089	<b>Fein knife 216</b>	Straight form		<b>NEW</b>
08193065	<b>Safety gloves Dottie</b>	Size M, colour blue 1 pair		<b>NEW</b>
08193065-5	<b>Safety gloves Dottie</b>	Size M, colour blue 5 pairs		<b>NEW</b>
08193063	<b>Safety gloves PU-coated</b>	Size XL, colour grey 1 pair		<b>NEW</b>

08193064	<b>Safety gloves PU-coated</b>	Size XXL, colour grey 1 pair	<b>NEW</b>
133601310 2456ASNR	<b>BMW X6 (E71) with HUD</b>	Rain/Light/Solar Sensor incl. electronic device OEM	<b>NEW</b>
133601229	<b>Lever bar</b>	1 pc.	<b>NEW</b>
133601231	<b>Starter kit SensorTack 2</b>	1 pc.	<b>NEW</b>

### Replacement articles






PMA-Article no. Eurocode	Model/Year	Description	OE Number	INFO
111538137 2455ASGHB	<b>BMW Mini Cooper R56</b> 07-	WS-Moulding lower 1 pc.	51312756196 	replaces Art. <b>111538132</b>
900818132 4635ASML	<b>DAF XF 105</b> 06-	WS-Moulding 1 pc.	1690130 	replaces Art. <b>900818131</b>
721238111 4907ASRL	<b>MAN F90 breit</b> 86-96	WS-Rubber OEM 1 pc.	81961200905	replaces Art. <b>721238112</b>
753128112 5416ASRL2	<b>Mercedes 381 II</b> 89-97	WS-Rubber 1 pc.	3816710039 	replaces Art. <b>753128111</b>
317018132 5337ASMST	<b>Mercedes E Class W210</b> Sed/Estate 95-02	WS-Moulding upper metal 1 pc.	2106700922 	replaces Art. <b>317018131</b>
392278131 7232AKMH	<b>Renault Clio I</b> 91-08/98	WS-Moulding kit+2x 4000301 4 pcs.		replaces Art. <b>392278101</b>


### Price changes





PMA-Article no. Eurocode	Model/Year	Description	OE Number	INFO
01155001	<b>Mirror base pliers</b>	1 pc.	51317157681	<b>Price increase immediately</b>
110268131 2452ASMRT	<b>BMW X5 (E70) w/o HUD</b>	WS-Moulding upper OEM 1 pc.	51317157681	<b>Price increase immediately</b>

110268132 2452ASMRT1H	<b>BMW X5 (E70) w. HUD</b>	WS-Moulding upper OEM 1 pc.	51317178232	<b>Price increase immediately</b>
13401303	<b>Glass cleaner Citro</b>	10 l can 1 pc.		<b>Price increase immediately</b>
13360189	<b>Adhesive pad Audi/Opel</b>	A3-A4-A6-A8-Q7-TT-Corsa D-Zafira II 1 pc.	4E0955609 <b>Printing error in pricelist!</b>	<b>Price increase immediately</b>
13373401	<b>Loctite glass adhesive set</b>	1 pc.		<b>Price increase immediately</b>
13373402	<b>Loctite Circuit+</b>	Repair Kit for backlite defogger 1 pc.		<b>Price increase immediately</b>
13373404	<b>Loctite Bonding Kit</b>	Glass/Metal 1 pc.		<b>Preissenkung immediately</b>
13373406	<b>RIM FIX</b>	glass rubber instant glue 1 pc.		<b>Price increase immediately</b>
13373406B	<b>Loctite 480</b>	black 1 pc.		<b>Price increase immediately</b>
440578131 7925ASMS	<b>Subaru Legacy III Sed/Estate 99-03</b>	WS-Moulding OEM 1 pc.	65058-AE000 <b>Printing error in pricelist!</b>	<b>Price increase immediately</b>

**No longer available**

PMA-Article no. Eurocode	Model/Year	Description	OE Number	INFO
599008131	<b>AMI Dodge Van diverse 55-93</b>	WS-Moulding 1 pc.		<b>no longer available</b>
599678101	<b>AMI Ford Aerostar FS &amp; CF 86-94</b>	WS-Installation kit 12 pcs.	N 804583 x12 	<b>no longer available</b>
023238231 8540BSMS	<b>Audi 100 IV/A6 Sed. 91-98</b>	BL-Moulding OEM 1 pc.	4A5845521A	<b>no longer available</b>
591588131	<b>Chevrolet Astro/Safari 6/96-99</b>	WS-Moulding 1 pc.		<b>no longer available</b>
598488111	<b>Chevrolet Blazer/Jimmy 75-91</b>	WS-Rubber 1 pc.		<b>no longer available</b>
598488131	<b>Chevrolet G Serie Van 75-80</b>	WS-Filler strip chrome 2 pcs.		<b>no longer available</b>

598538112	<b>Chevrolet G Serie Van</b> 75-80	WS-Rubber 1 pc.		<b>no longer available</b>
5914488131 DW1448	<b>Chevrolet Trail Blazer</b> 02-	WS-Moulding 1 pc.	15095432 	<b>no longer available</b>
174418221 2715BSMH	<b>Citroen BX I Sedan</b> 83-93	BL-Moulding 1 pc.	95592669 	<b>no longer available</b>
255038131 3000ASMH	<b>Daewoo Nexia</b> 95-97	WS-Moulding with rain channel 1 pc.	96189875 	<b>no longer available</b>
6201	<b>Filler profile</b>	7x6mm black 50 m roll		<b>no longer available</b>
240758161 3921AKCC1F	<b>Honda Civic III CRX</b> 84-87	Fastener kit 36 pcs.		<b>no longer available</b>
241138141 3931AKCC	<b>Honda Prelude III BA4</b> 88-91	WS-Clip kit 21 pc.		<b>no longer available</b>
251848141 4103AKCS	<b>Hyundai Sonata I</b> 90-93	WS-Clip kit 14 pcs.		<b>no longer available</b>
1401001-50 AJ03ASCR	<b>Jeep Cherokee</b>	WS-Clip kit 50 pcs.		<b>no longer available</b>
591368111 AJ01ASRR	<b>Jeep Eagle/Renegade</b> 76-86	WS-Rubber 1 pc.		<b>no longer available</b>
474048131 8307ASMST	<b>Lexus GS</b> 97-00	WS-Moulding OEM 1 pc.	75531-30260	<b>no longer available</b>
474038131 8296ASMSTC	<b>Lexus LS</b> 95-00	WS-Moulding chrome OEM 1 pc.	75531-50020	<b>no longer available</b>
301658131 5143ASMC	<b>Mazda MX 6 Coupé</b> 91-97	WS-Moulding OEM 1 pc.	GA5R-50-6AXB	<b>no longer available</b>
316098211 5320BSRE	<b>Mercedes W123 Estate</b> 76-82	WS-Moulding OEM 1 pc.	1237400656	<b>no longer available</b>
1102001-10 6262ASCV1	<b>Opel Monterey</b>	WS-Clip A-pillar 10 pcs.	10 X 162 968 	<b>no longer available</b>
353308231 6261BKME	<b>Opel Omega B Caravan</b> 94-	BL-Moulding inner OEM 3 pcs.	170700 X2+170701	<b>no longer available</b>
472138141 8253AKCC	<b>Toyota Celica TA 160+</b> ST 162/165 86-89	WS-Clip kit 22 pcs.		<b>no longer available</b>

472158141 8257AKCC	<b>Toyota Supra GA70 Coupé</b> 86-93	WS-Clip kit 24 pcs.		<b>no longer available</b>
590148131 SW101400A	<b>USA Chevrolet</b> Beretta/Corsica	WS-Moulding 1 pc.		<b>no longer available</b>
5008 SW101400A	<b>Weatherstrip profile</b>	31,5x21,7mm 15m rolls		<b>no longer available</b>
524168712 8533RSMHRQ	<b>VW Golf II/Jetta</b> 83-91	Sidelight rubber right side 1 pc.	191845322 	<b>no longer available</b>

This offer is subject to the general terms and conditions of PMA/TOOLS DIVISION AG. Our own product developments bear the PMA/TOOLS logo..

**Phone** **0049 (0) 2154 / 92 22 30**

**Fax** **0049 (0) 2154 / 92 22 55**

**Internet Shop** **www.pma-tools.de**

You can [download](#) all the information from our Internet site, by entering your customer number and password (which you'll find on the customer card "My account"), which we recently sent to you. You can also retrieve all the [prices](#) for our new items. Just log on in the right-hand section of our Website to gain access, then click on "downloads" in the left navigation section, choose "English" and "Latest information".